

Acer

WLAN 11g Broadband Router

Quick Start Guide

Android mode

If you need any help using the Android features of your smart camera, see the Holo360 User's Manual. You can go to www.acer.com to download the User's Manual.

Using the Camera

Tap an icon from the Home screen. Or, press the **Camera** button.




OR



Camera screen

More



- **Timer:** Set a delay of 3, 5, or 10 seconds before the image is taken.
- **Brightness:** Set the brightness level of +1, +2, +3, -3, -2, -1, or 0 before the video is taken.
- **Settings:** Configure the general (power saving mode, location, storage), capture (360° resolution, continuous shot, grid) or video (360° resolution, 360° recording limit, audio mode) settings and restore all settings to original value.

2008 © Koninklijke Philips Electronics N.V. Усі права застережено. Технічні характеристики можуть бути змінені без попередження. Товарні знаки є власністю компанії Koninklijke Philips Electronics N.V. або їх відповідних власників.

Компанія Philips зберігає за собою право змінювати вироби у будь-який час без обов'язку змінювати відповідним чином попередні поставки.

Матеріал, поданий у цьому посібнику, відповідає використанню системи за призначенням. Якщо виріб, окремі модулі чи процедури використовуються для інших цілей, ніж зазначено тут, слід отримати підтвердження їх дійсності та придатності. Компанія Philips гарантує, що матеріал не порушує умов жодних патентів у Сполучених Штатах. Подальші гарантії, прямі чи непрямі, відсутні.

Гарантійні зобов'язання

Виріб не містить компонентів, придатних для обслуговування користувачем. Не відкривайте та не знімайте кришок до внутрішніх деталей виробу. Ремонт може виконувати лише персонал центрів обслуговування Philips та офіційних ремонтних майстерень. Недотримання цих вимог призведе до втрати гарантійних зобов'язань, прямих чи непрямих. Будь-які операції, прямо заборонені у цьому посібнику, будь-які налаштування чи процедури з монтування, не рекомендовані чи не дозволені у цьому посібнику, призведуть до втрати гарантійних зобов'язань.

Характеристика пікселів

Цей виріб із РК екраном має велику кількість кольорових пікселів. Незважаючи на те, що ефективних пікселів 99,99% або більше, на екрані можуть з'явитися чорні або яскраві світлові точки (червоні, зелені або сині). Це структурна властивість дисплея (відповідно до типових галузевих стандартів) і не є несправністю.

Відповідність вимогам щодо електромагнітних полів

Компанія Koninklijke Philips Electronics N.V. виготовляє і продає багато виробів, які, як будь-який електронний пристрій, випромінюють та отримують електромагнітні сигнали.

Один із основних принципів роботи компанії Philips – зживати усі необхідні заходи безпеки та охорони здоров'я, аби відповідати усім відповідним юридичним вимогам та вимогам щодо електромагнітних полів, дійсним на час виготовлення виробів.

Компанія Philips зобов'язується розвивати, виготовляти та виводити на ринок вироби, які не завдають шкоди здоров'ю.

Компанія Philips підтверджує, що якщо з її виробами поводиться належним чином і за призначенням, вони є безпечними у користуванні, що підтверджують наукові докази, доступні на даний час.

Компанія Philips бере активну участь у розробці міжнародних стандартів щодо ЕМП і норм безпеки, що дає компанії можливість прогнозувати розвиток подій у галузі стандартизації та одразу пристосовувати свою продукцію до нових вимог.

Запобіжник (лише для Великобританії)

Цей телевізор обладнано перевіреною суцільною вилокю. Якщо виникне потреба замінити запобіжник, його слід замінити на запобіжник із таким самим значенням, як вказано на вишці (наприклад, 10 A).

1. Зніміть кришку запобіжника і сам запобіжник.
2. Запасний запобіжник має відповідати нормам BS 1362 і має мати знак схвалення ASTA. Якщо запобіжник втрачено, зверніться до торгового представника, щоб перевірити, чи тип запобіжника правильний.
3. Встановіть кришку запобіжника.

Щоб забезпечити відповідність нормам електромагнітної сумісності, штекер не слід від'єднувати від кабелю живлення.

Авторське право



Логотипи VESA, FDMI та VESA Mounting Compliant є торговими марками асоціації зі стандартів в області відеоелектроніки Video Electronics Standards Association.

® Kensington та Micro Saver є зареєстрованими у США торговими марками корпорації ACCO World Corporation із виданими реєстраціями та поданими заявками у всьому світі, які очікують на відповідь. Усі інші зареєстровані та незареєстровані товарні знаки є власністю їх відповідних власників.

- Select to connect to a **Residential Gateway**.
- Set the correct **Network Name** and **Encryption Key**.

1. In the field **Network Name** enter the 8-character RG ID to define the same of the wireless network to which you want to connect. The **Network Name** has to match the unique RG ID (which can be found on the device).
2. In the **Encryption Key** field enter the last 5 digits of the RG ID (default).

NOTE:

If you changed the default Encryption Key on the Residential Gateway (RG) you will need to enter the new value here as well.

3. Click **OK** to confirm and return to the Add/Edit Configuration Profile window.
4. Click **OK** again to finish the installation.

Basic Settings for Peer-to-Peer

Workgroups

If you wish to connect to a Peer-to-Peer workgroup, use the Add/Edit Configuration Profile window to:

- Select to connect to a **Peer-to-Peer Workgroup**.
- Set the correct **Network Name** and **Encryption Key**.


1. In the field **Network Name** define the name of the wireless network to which you want to connect.
The Network Name can be any alphanumeric string in the range of "a" to "z", "A" to "Z" and "0" to "9" with a maximum of 32 characters (case-sensitive).
 - If there is already a Peer-to-Peer group with this name available your computer will automatically connect to this workgroup.
 - If there is not yet such a group available, your computer will automatically start one with this name.
2. Click **OK** to confirm and return to the Add/Edit Configuration Profile window.
3. Click **OK** again to proceed with the installation.

Finish the Installation

When you have finished "Set Basic Parameters", click the **OK** button to close the Add/Edit Configuration window and to proceed with the installation process. Windows will finish building the driver configuration database and copy some files to your computer's hard disk.



CONTAINS LITHIUM ION BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

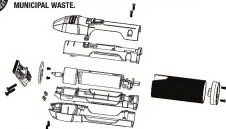

Cleaning brush



Lubricating oil



Zero gap tool



Blade guard



Screwdriver

FX787G PRODUCT FEATURES

1. Zero Gap T-Blade
2. Brushless Motor - 7200 rpm
3. Power adapter
Model No.: CD45100-A
Input: 100-240V ~ 50/60Hz 0.2A
Output: 4.5V DC 1000mA
4. LED charge indicator light
 - a. LED BLUE Blinking - Charging
 - b. LED BLUE - Fully Charged
 - c. LED BLUE Flashing - 10 minutes battery left
5. Discharge time: 120 minutes

Before using the Class 2 Power supply, read these instructions carefully. This trimmer should only be used with the supplied adapter.

Use only with adapter Model No.: CD45100-A which is provided.

Rated input voltage: 100-240V ~, 50/60Hz 0.2A

Rated Output: 4.5V DC 1000mA

OPERATION

1. For dry location use only. Do not expose to water.
2. When not in use, unplug unit completely.
3. Unit will become warm during operation.

CAUTION

1. Dry location use only. Do not expose to liquids, vapor, or rain.
2. Ensure jack is plugged into the trimmer unit before plugging the adapter into the outlet.
3. Do not operate any appliance that has a damaged output cord or housing.
4. Always unplug the unit before cleaning or when not in use.
5. Be sure voltage is correct before plugging in. For connection to supply not in the U.S.A. use an attachment plug adapter of the proper configuration for power outlet. The included adapter automatically adjusts to the input voltage. **DO NOT USE A VOLTAGE CONVERTER.**

TRIMMER CHARGING PRECAUTIONS

- Avoid charging the batteries at temperatures below 41° F (5° C) or above 95° F (35° C).
- Avoid charging the batteries in direct sunlight or near a radiating heat source.
- Even though the trimmer may not be used for an extended period, charge once a month to preserve battery life.
- The power cord cannot be replaced. If it is damaged, the AC adapter should be discarded.

TRIMMER OPERATING PRECAUTIONS

- This trimmer has a built-in rechargeable battery. Do not throw into fire, apply heat, or charge, use, or leave in a high-temperature environment.

1.3.4 Connecting the Printer (Optional)

If you have a parallel printer, connect it to the parallel port on the rear panel. See Figure 1-6.

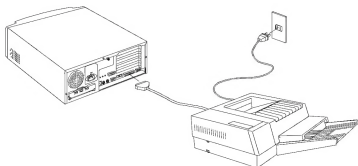


Figure 1-6 Connecting the Parallel Printer



If you have a serial printer or other serial peripheral, connect it to the serial port (COM1).

CONNECTION

POWER ON:

ON/OFF/PLAY/PAUSE/STOP



Press "▶||" to turn on the player.



NOTE: When the player is turned on it will be in the MUSIC mode.

POWER OFF:

ON/OFF/PLAY/PAUSE/STOP



Press "▶||" and hold to turn off the player.



Taking care of your vision

Long viewing hours, wearing incorrect glasses or contact lenses, glare, excessive room lighting, poorly focused screens, very small typefaces and low-contrast displays could stress your eyes. The following sections provide suggestions on how to reduce eyestrain.

Eyes

- Rest your eyes frequently.
- Give your eyes regular breaks by looking away from the monitor and focusing on a distant point.
- Blink frequently to keep your eyes from drying out.

Display

- Keep your display clean.
- Keep your head at a higher level than the top edge of the display so your eyes point downward when looking at the middle of the display.
- Adjust the display brightness and/or contrast to a comfortable level for enhanced text readability and graphics clarity.
- Eliminate glare and reflections by:
 - placing your display in such a way that the side faces the window or any light source
 - minimizing room light by using drapes, shades or blinds
 - using a task light
 - changing the display's viewing angle
 - using a glare-reduction filter
 - using a display visor, such as a piece of cardboard extended from the display's top front edge
- Avoid adjusting your display to an awkward viewing angle.
- Avoid looking at bright light sources, such as open windows, for extended periods of time.

Developing good work habits

Develop the following work habits to make your computer use more relaxing and productive:

- Take short breaks regularly and often.
- Perform some stretching exercises.
- Breathe fresh air as often as possible.
- Exercise regularly and maintain a healthy body.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 44 62 29 29
Germany	Nürnberg	+49 (0) 911 323 2600
Italy	Pordenone	+39 (0) 1678 47053
Sweden	Stockholm	+46 (0) 8 738 7910
UK	Slough	+44 (0) 1753 219899

Technical data

Model

8160 D

Size	Height	800-1350 mm
	Width	598 mm
	Depth	470 mm
Light		Max 1x11 W PL
Grease filter		2 pcs.
Voltage		220-240 V
Total power		170 W
Fuse Rating		13 Amp

Extra accessories:

Carbon filter KF 8 (LONGLIFE)
Carbon filter KFL 60/80

P-nr. 942 118 609
610 899 421

- The product does not operate normally after following the operating instructions.
- **Note:** Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

DISPOSAL INSTRUCTIONS

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit www.acer-group.com/public/Sustainability/sustainability01.htm



REGULATORY INFORMATION

CAUTION when listening

To protect your hearing, follow these instructions.

- Increase the volume gradually until you can hear clearly and comfortably.
- Do not increase the volume level after your ears have adjusted.
- Do not listen to music at high volumes for extended periods.
- Do not increase the volume to block out noisy surroundings.
- Decrease the volume if you can't hear people speaking near you.



Prevention of hearing loss



Caution: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.



À pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

8. Maintenance

	System/components	Procedure	Before use	Every 25 hours after	Every 50 hours after	Every 100 hours after	Note
ENGINE	fuel leaks, fuel spillage	wipe out	✓				
	fuel tank, air filter, fuel filter	inspect/clean	✓	✓			replace, if necessary
	idle adjusting screw	see adjusting idling speed	✓				replace carburetor if necessary
	spark plug	clean and readjust plug gap			✓		GAP: 0.6 ~ 0.7 mm replace, if necessary
	cylinder fins, intake air cooling vent	clean		✓			
TRIMMER	muffler, spark arrestor, cylinder exhaust port	clean				✓	
	throttle lever, ignition switch	check operation	✓				
	cutting parts	replace if something's wrong	✓				
	gear case	grease			✓		
	screws/nuts/bolts	tighten/replace	✓			✓	not adjusting screws
	debris guard	make sure to attach	✓				

⚠ WARNING

- Make sure that the engine has stopped and is cool before performing any service to the machine. Contact with moving cutting head or hot muffler may result in a personal injury.

BLADE

- Check the blade and the fasteners for looseness, cracking, or bending.
- Check the cutting edges and reform with a flat file.

Point

1. Keep the end corner sharp.
2. Round the root of the edge.
3. Do not use water when using a grinder.



- You need not to adjust the gap between upper blade and lower blade as this product is designed to have optimal gap when it is properly set up.



- (1) Bolt
- (2) Plate
- (3) Spacer
- (4) Nut

❗ IMPORTANT

When mounting the blade, make sure to fasten the spacer, washer and bolt, then fasten the nut.

■ SHARPENING



Always keep the file or sharpener at an angle of 45° to the blade, and:


- Always grind in the direction of the cutting edge;
- Note: files cut only in one direction; lift the file from the blade when returning to start a new pass;
- Remove all burr from the edge of the blade with a slip stone;
- Remove as little material as possible;
- Before refitting the sharpened blades, remove filings and then apply grease.

Do not try to sharpen a damaged blade: change it or take it to a Service dealer.

Projector Overview


Projector Outlook

Front/upper side

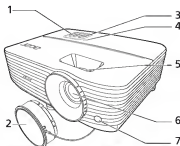

#	Description	#	Description
1	Control panel	5	Zoom ring and Focus ring
2	Lens cap	6	Projection lens
3	Power key and Power indicator LED	7	Remote control receiver
4	IR remote sensor		

Rear side



Note: Connector interface is subject to model's specifications.


#	Description	#	Description
1	Audio input connector Audio output connector	6	RS232 connector
2	Analog RGB signal/HDTV/ component video input connector	7	DC 5V output
3	HDMI connector (UHD 4K)	8	12V DC output connector
4	HDMI connector	9	Kensington™ lock port
5	Mini USB connector	10	Power socket
		11	Tilt adjusting wheel

Monitor Block Diagram

The LCD MONITOR will contain a main board, a power board, and key board which house the flat panel control logic, brightness control logic and DDC.

The inverter board will drive the backlight of panel and the DC-DC conversion,

The Adapter will provide the 12V DC-power to inverter/power board.

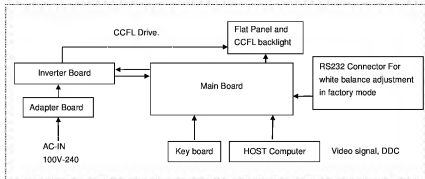

RF exposure information (SAR)

This device meets the FCC requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The unit of measurement for the FCC limit is the "Specific Absorption Rate" (SAR). The SAR limit set by the FCC is 1.6 W/kg, averaged over 1 g of tissue. The FCC have granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on the FCC ID for your device, which can be found on the product labeling of your device.

For body-worn operation, this device has been tested use with accessories that contain no metal and that position the handset a minimum of 1.0 cm from the body. Use of other accessories may not ensure compliance with RF exposure. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 1.0 cm from your body when the device is switched on.

During use, the actual SAR level is usually much lower than the maximum value. In general, the closer you are to a base station, the lower the transmission output of your device. To reduce exposure to RF energy, use a hands-free accessory or other similar option to keep this device away from your head and body.

This phone meets the FCC and requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The highest SAR value of this device is listed below:


	FCC (W/kg @1g)
Head	0.70
Body	1.19

Locking your TV


1			Press the MENU key on the remote control to bring up the OSD.
2		Use the directional keys to navigate to the  Parental Control menu. Then select Password .	
3		Enter your Password. Then, select Channel block , Age Rating or Input block for further settings. (see page 14 note)	

Reorder for channels

The first time you completed the setup wizard, all available channels were listed. If you need to reorder for new channels, please follow the steps below:



Reordering for channels

1		Press the MENU key on the remote control to bring up the OSD.
2		Use the directional keys to navigate and select  Channel Management. Then select Channel Edit .
3		 Highlight Reorder. Then, select the channel you wish to reorder and press OK to confirm. Move to the right channel number and press OK to reconfirm.
4		Press MENU to exit.

Fiorenzato

Notification of CEE conformity

The Fiorenzato M.C S.r.l society, Via Niedda 12/b - 35010 Peraga di Vigonza (PD) Italia, declares that coffee grinder-dosers and coffee grinders comply to the essential requirements of the following directives:

Low voltage directive 2006/95/EC


Machine directive 2006/42/EC

EMC directive 2004/108/EC

Those coffee grinder dosers has been tested applying the norms EN60335-1 (safety of instruments voters to use domestic and similar) and EN60335-2-64 (2nd Part: Particular norm for kitchen instruments and collective use).

Fiorenzato M.C.

uff. Tecnico





La vie de service des piles varie selon les conditions d'utilisation.


Si le couvercle du logement des piles s'ouvre → B

Remarques sur les piles sèches

- Vérifiez que les marques ① et ② sont correctement alignées.
- Ne mélangez pas des piles de types différents, ou des piles ancienne et neuve.
- Pour éviter tout risque de fuite d'électrolyte ou d'explosion, ne rechargez pas, ne chauffez pas et ne démontez jamais les piles.
- Retirez les piles de l'appareil quand il n'est pas utilisé, pour éviter toute usure inutile.
- En cas de fuite d'électrolyte, éliminez complètement tout le liquide en l'essuyant.

Connecting the camera to your TV

Connect your camera and TV via an AV cable for real-time display. You can display your video clips, still pictures, and audio recordings directly on your TV screen to share them with your friends and family members.

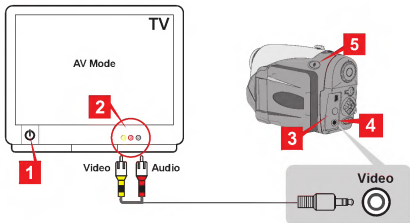

- 1** Turn on your TV and switch to AV mode.
- 2** Connect the audio and video ends of the AV cable to your TV.
- 3** Open the connector cover of your camera.
- 4** Connect the other end of the video cable to your camera.
- 5** Turn on the camera.

 For more details on selecting the A/V options, please refer to page 29.